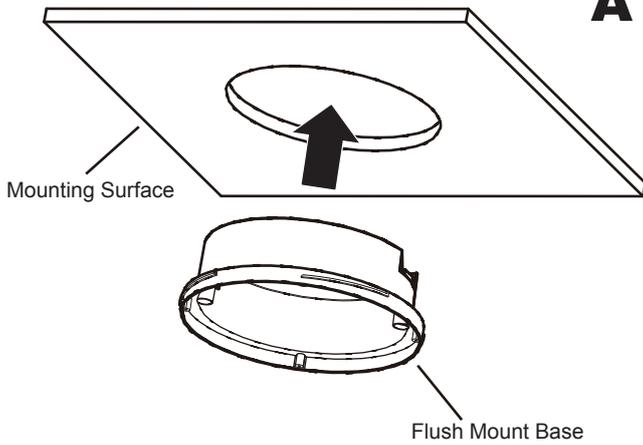
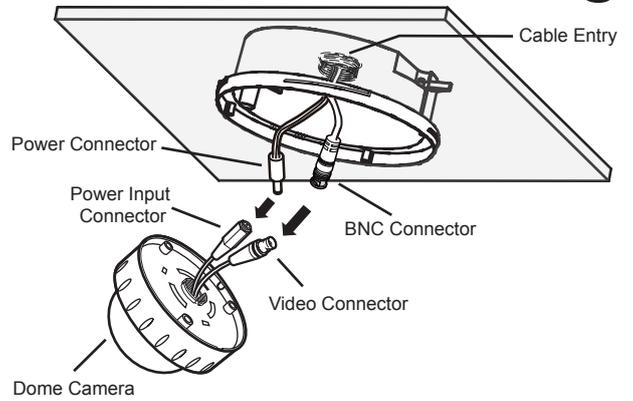
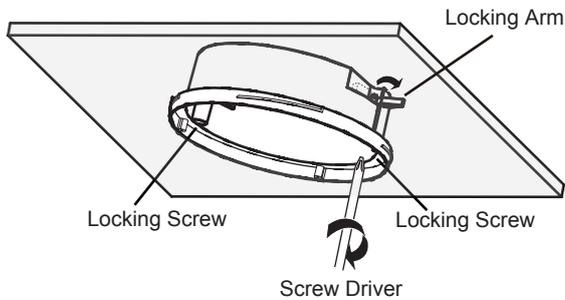


A


Create an aperture of 5.75 inch (146mm) on the mounting surface to fit the flush mount base.

C


Make the connection to the video and power leads then feed the connectors back through the cable entry; insert the dome onto the threaded portion of the backbox and rotate the dome clockwise to tighten.

B

To fasten rotate out the locking arms by turning the screws clockwise.

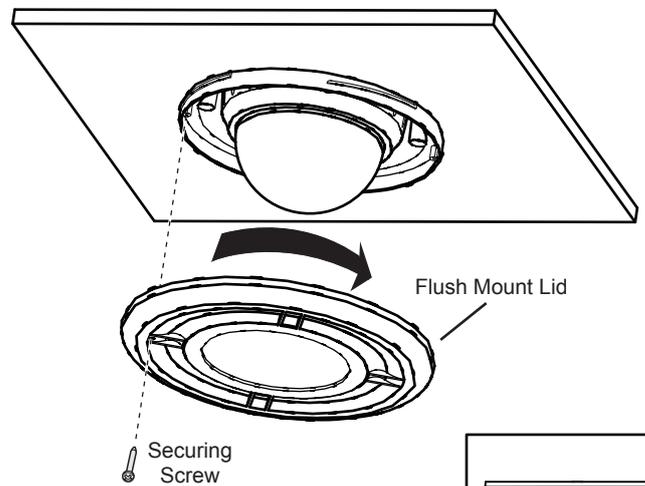D

Fit and turn the flush mount lid clockwise onto the base. Insert and tighten the securing screw to complete the installation.

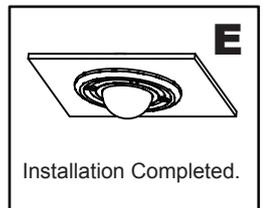E

Precautions

To prevent damage to your dome camera or injury to yourself or to others, read and comply with the safety precautions in the enclosure installation and camera sheet before installation and use.

Packing List

- Flush Mount Base x 1
- Flush Mount Lid x 1
- Screw Pack x 1

Please visit our website for more information:
www.deview.com



VIEW
MD4 Series Indoor Dome Camera
Flush Mount
Installation Sheet

